



Hard drive replacement

In this guide, you'll learn how to replace the hard drive of your Asus K52JC laptop.

Written By: Brendan Bobis



INTRODUCTION

Replacing the hard drive on this device is quite easy. This guide doesn't involve any complicated manipulation.



TOOLS:

- [Tournevis Cruciforme PH1](#) (1)



PARTS:

- [New Item](#) (1)

Step 1 — Power off and return the device




- First, turn off your laptop, then unplug the power supply. Unplug any peripheral devices connected to your laptop.
- Then, remove the battery from the laptop.
 - ⓘ In the picture, the battery is not present.

Step 2 — Remove the screws and open the cover



- Next, remove the 4 Phillips screws from the service door cover.
 - ⓘ In this photo, the screws are already removed.

Step 3 — Remove the hard drive from its location

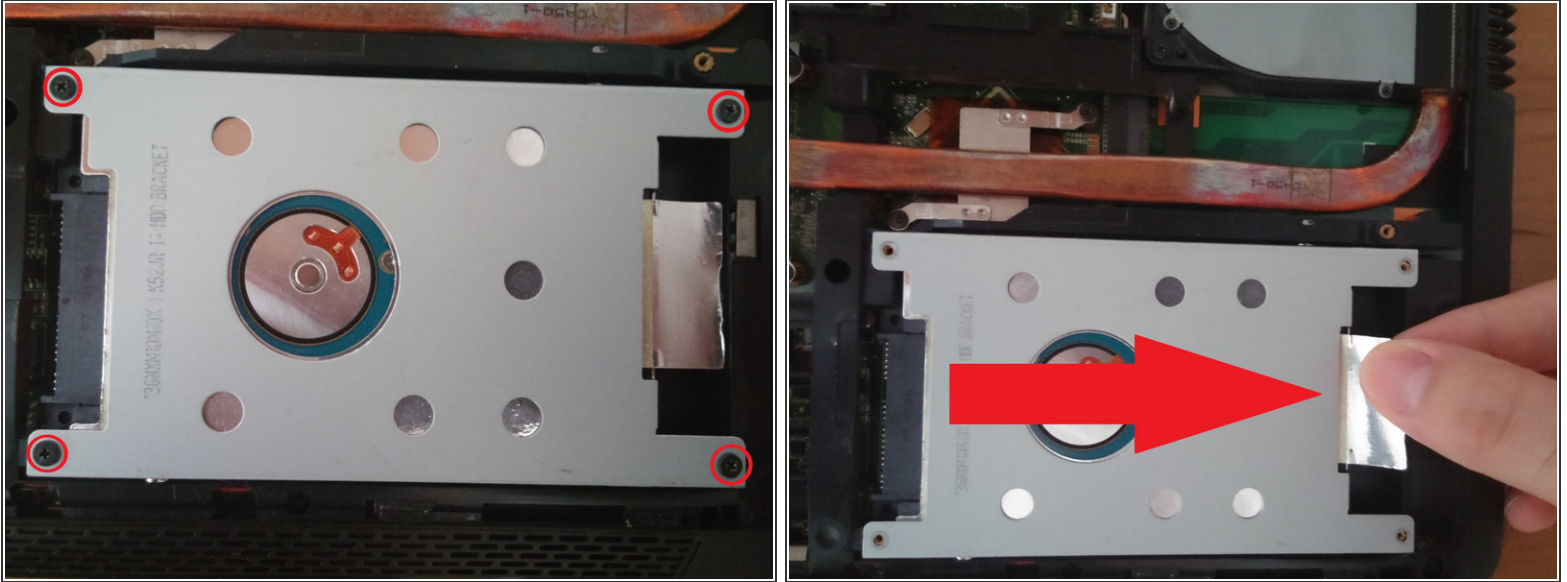

- Remove the 4 screws that are circled in red on the photo.
- Once the screws are removed, slide the hard drive to the right, with the help of the tab.

Step 4 — Remove the hard drive from its metal support



- Remove the 4 screws, situated on the side of the support.
- Then, remove the hard drive from its metallic support.
- Finally, replace the hard drive with a new one or an SSD.

To reassemble your device, follow these steps in the reverse order.

